




ELOTECH
INDUSTRIELEKTRONIK GMBH

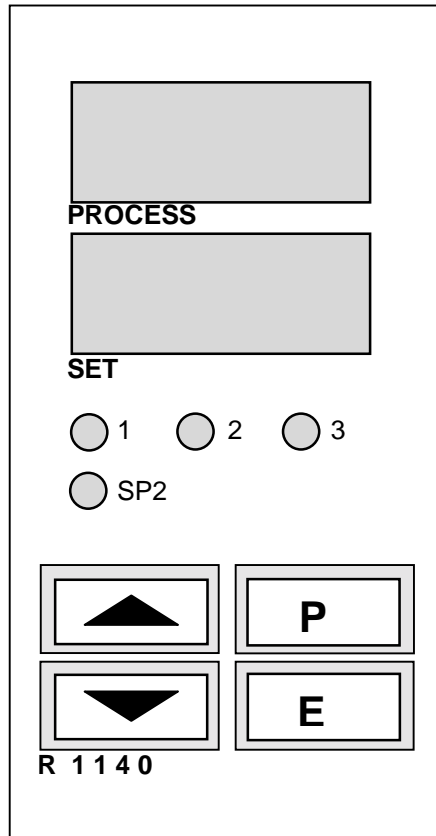

Format: 48 x 96 mm (1/8-DIN)
Installation depth: 122 mm

R 1140 - 14 Three-Point Stepping Controller
R 1140 - 64

Description and Operation Manual

Contents

Type code	Page	2
Connection diagram		3
Technical data		4
Display and keyboard		5
Operating levels, general		6
Configuration level		7
Parameter level	10	
Operating level		12
Error displays		13
Installation instructions		13
Parameterlist		14

Please read this operating manual carefully before starting up.

Observe the installation and connecting instructions.


Before operation, the unit must be configured for its intended purpose under an expert guidance.

(e.g. sensor type and range, alarm adjustment etc.)


See: „Configuration Level“

Attention: The „open“- or „close“-outputs can be active while programming or configuring the controller. This can cause a damage either to the plant itself or its contents.

Type Code

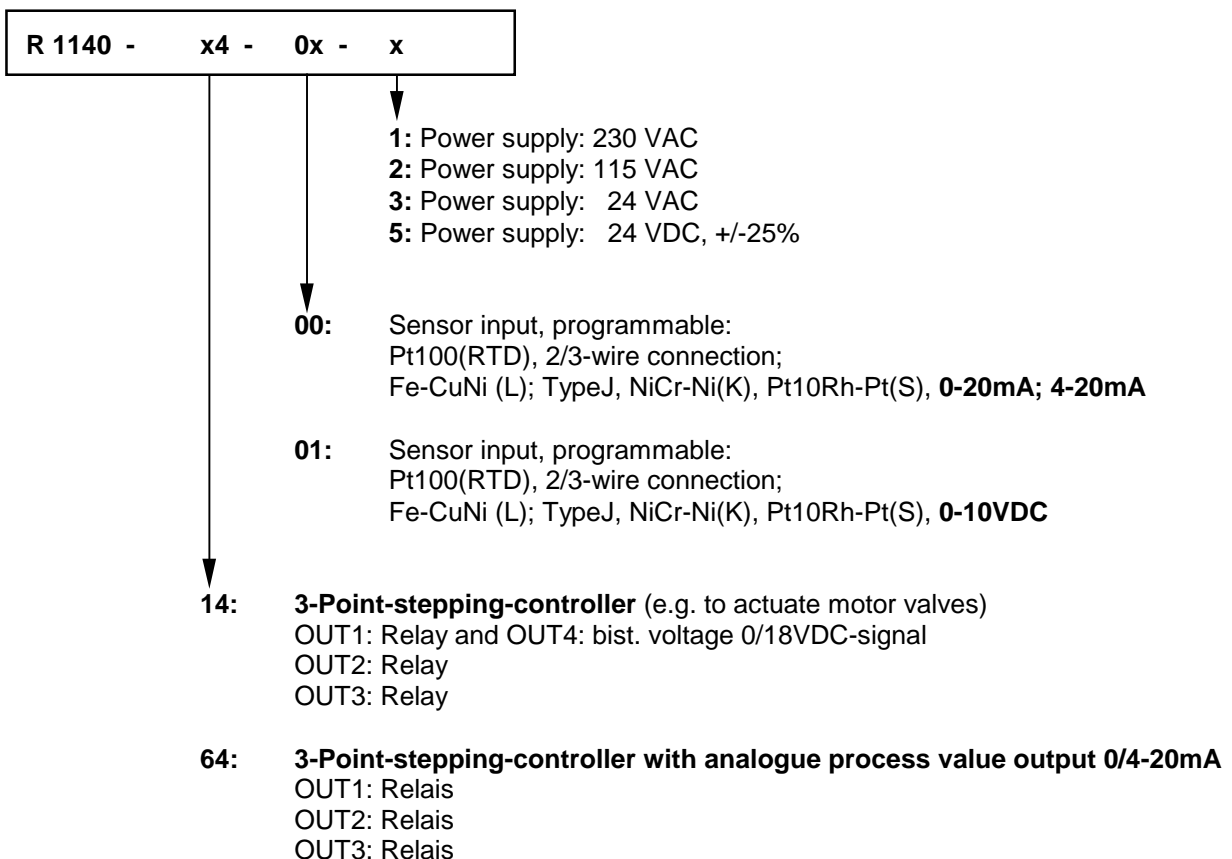

Connection diagram

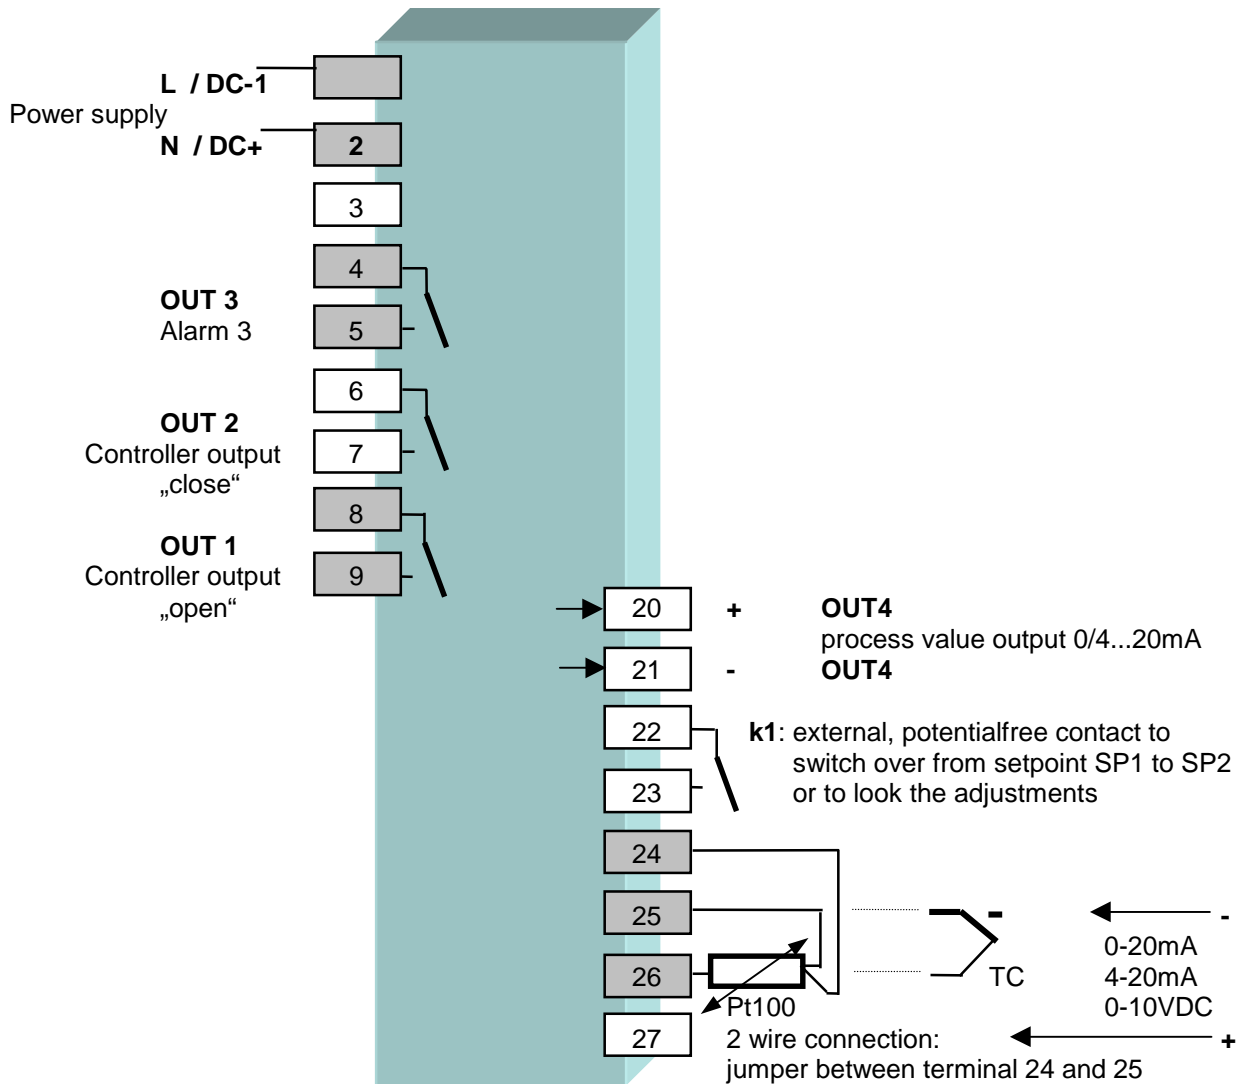

Terminals 24 – 27: sensor inputs

OUT1 = Control output "open"

OUT2 = Control output „close“

OUT3 = Alarm Output Alarm 3

OUT4 = .Analogue actual process value output; see: parameter „Out4“

Function of contact k1: programmable. See parameter Co.c1. Possible adjustments: „Loc“ or „SP2“.

1. Adjustment lock (LOC):
 k1: open = Adjustment lock only via "Software Code"
 k1: closed = Adjustment locked (according to the chosen software code)


2. Setpoint Controlling:
 k1: open = Setpoint 1 (SP1) valid
 k1: closed = Setpoint 2 (SP2) valid

Technical Data

Input Thermocouple:	Built-in internal compensation point and protection against sensor breakage and incorrect polarity. Re-calibration not required for a line resistance of up to 50 Ohms. Calibration accuracy: $\leq 0,25\%$
Input RTD:	Built-in protection against sensor breakage and short circuit. Max. permissible line resistance by 3-wire connection: 80 Ohms Sensor current: $\leq 0,5 \text{ mA}$ Calibration accuracy: $\leq 0,2 \%$
Standard signal inputs:	0-20mA, 4-20mA. Load: max. 500 OHm or 0-10VDC. Load: min. 10kOhm/ Volt
Linear error:	$\leq 0,2 \%$
Influence of the ambient temperature:	$\leq 0,01 \%$ / K
Setpoint selection (k1):	Ext. potential-free contact, switching voltage appr. 24 V DC, max. 1 mA. Selection between SP1 (main setpoint) and SP2.
Process value output: OUT4	Version R1140-64: 0/4...20 mA, Load max. 500 Ohm according to the selected measuring range Linearity: $\leq 1,5 \%$; Delay time: app. 2 secs.
Control outputs: OUT1, OUT2	Relay (UR appr.), max. 250 Vac, max. 3 A (cos-phi = 1)
Alarm output: OUT3	Relay (UR appr.), max. 250 Vac, max. 3 A (cos-phi = 1)
7-Segment-Display:	Process: 10 mm red, Set: 10 mm red
Data protection:	EAROM
CE-Mark	Tested according to 89 / 336 / EEC. EN 50081-2, EN 50082-2 Electr. safety: EN 61010
Power supply:	Standard: 230 V AC. $\pm 10 \%$, 48...62 Hz. 24VDC; $\pm 25\%$ Others possible. See Type Code.
Connections:	Screw terminals (UR appr.). Protection mode IP 20 (DIN 40050), Insulation class C.
Permissible operating conditions:	Operating temperature: 0...50 °C / 32...122 °F Storage temperature: -30...70 °C / -22...158 °F Climate class: KWF DIN 40040; Equivalent to annual average max. 75 % rel. humidity. No condensation.
Casing:	Format: 48 x 96 mm (DIN 43700). Installation depth 122 mm Panel cutout: 45 +0,6 mm x 92 +0,8 mm Material: Noryl, self-extinguishing, non-drip, UL 94-V1 Protection mode: IP 20 (DIN 40050), IP 50 front side
Weight:	app. 380g

Subject to technical improvements!


Display and Keyboard

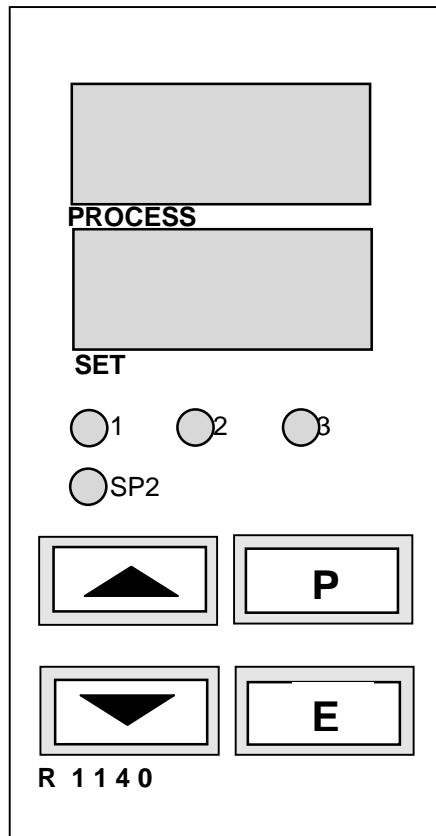

Display PROCESS : Process Value
Display SET : Setpoint Value

LED 1: Output OUT1 active: Control Output „open“
LED 2: Output OUT2 active: Control Output „close“
LED 3: Output OUT3 active: Alarm Output A3

LED SP2: Setpoint 2 active

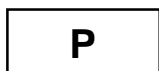

Parameter key



Adjustment of chosen parameter (e.g. setpoint) to higher or lower values.
 E.g. setpoint adjustment.



Short operation: single-step adjustment
 Longer operation: quick-scanning

When the parameter adjustments have been altered but not entered,
 the display will flash bright/dark.



Confirmation and storage of the pre-selected values
 The display will shortly show a light chain as a control of this function.
 To return to the process- and setpoint-display: press „E“ appr. 2 sec..




Sets the parameter back to the originally stored value.
 Any alterations made to the parameters, that are not confirmed (E-key) within
 30 seconds, will not be accepted and the parameter will return to its originally
 stored value.

Operating Levels

The operation of the controller is divided into three levels.

Two seconds after switching on the unit, the controller will automatically be in the operating level.

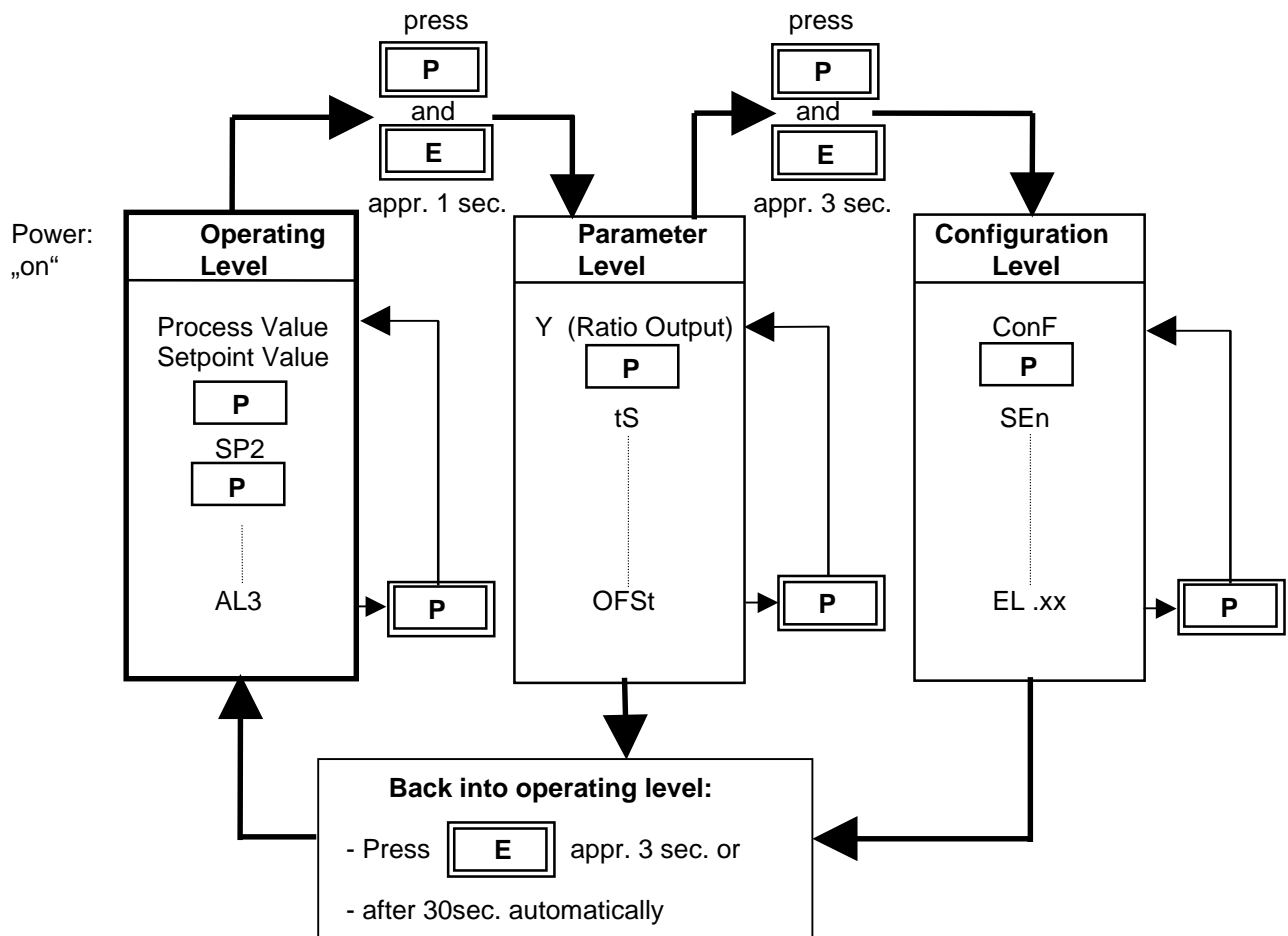

Operating level

Process- and setpoint value will be displayed simultaneously.

Within the operating level the setpoints and the alarm value can be adjusted by pressing the "▲" / "▼" - keys.

Every adjustment has to be quit by pressing the „E“ - key.

All parameters within the operating level can, in succession, be displayed by pressing the „P“ - key and adjusted by pressing the "▲" / "▼" - keys.

Parameter level

Enter this level by pressing the „P“ and „E“-key appr. 1 sec. simultaneously.

Within the parameter level the values are adjusted to suit the control behaviour to the individual process.

Leave this level by pressing key „E“ appr. 3 sec..

Configuration level

Enter this level by pressing the „P“ and „E“-key appr. 3 sec. simultaneously.

In the configuration level the controller type, sensor type, the sensor range, the alarm behaviour and the output type can be pre-selected.

This primary information has to be entered before taking the controller into operation.

The display of each single parameter within the parameter and configuration levels, and their adjustment, are made in the same way as within the operating level.

After either pressing the „E“ - key for approx. 3 seconds, or waiting for a period of approx. 30 seconds, the unit will automatically return to the operating level (display of process value and setpoint).

Configuration Level

Press „P“ and „E“-key appr. 3sec..

Display "Process"	Parameter	Display „Set“	
ConF	Controller configuration	3PSt	3-point-stepping controller (read-only parameter) This function is not adjustable.
Out4	Configuration output 4		Analogue process value output. Only Type R1140-64 (ex works)
		Pr. 0	0...20mA
		Pr. 4	4...20mA
Sen	Sensor selection	P1 °C	Pt 100, -50,0...100,0°C
		P1 °F	Pt 100, -58,0...212,0°F
		P2 °C	Pt 100, -100...200 °C
		P2 °F	Pt 100, -148...392 °F
		P4 °C	Pt 100, 0...400 °C (ex works)
		P4 °F	Pt 100, 32...752 °F
		P8 °C	Pt 100, 0...800 °C
		P8 °F	Pt 100, 32...1472 °F
		L4 °C	T/C Fe-CuNi (L), 0...400 °C
		L4 °F	T/C Fe-CuNi (L), 32...752 °F
		L8 °C	T/C Fe-CuNi (L), 0...800 °C
		L8 °F	T/C Fe-CuNi (L), 32...1472 °F
		J8 °C	T/C Fe-CuNi (J), 0...800 °C
		J8 °F	T/C Fe-CuNi (J), 32...1472 °F
		n1 °C	T/C NiCr-Ni (K), 0...1200 °C
		n1 °F	T/C NiCr-Ni (K), 32...2192 °F
		S1 °C	T/C Pt10Rh-Pt (S), 0...1600 °C
		S1 °F	T/C Pt10Rh-Pt (S), 32...2912 °F
		0 - 20	Current 0...20mA Voltage 0...10VDC (option 01)
		4 - 20	Current 4...20mA

If the Sensor selection is changed, the following parameters will be reset (setting in brackets) and need to be re-adjusted:

All Setpoints (set to OFF); ; alarm values (OFF); control sensitivity (0);
process offset(OFF); lower setpoint limitation (SP.Lo); higher setpoint limitation (SP.Hi).

SP.Hi higher setpoint limitation SP.Lo ... top range (ex works: 400)





SP.Lo lower setpoint limitation bottom range ... SP.Hi (ex works: 0)

Display "Process"	Parameter	Display „Set“
----------------------	-----------	------------------

Co.A3 Alarm 3-Configuration
(OUT 3)

- OFF
1
2
3
4
5
6
7

alarm OFF, no alarm signalisation (ex works)
 signal contact: off-on
 limit contact: off-on
 limit comparator: off-on-off
 signal contact: on-off
 limit contact: on-off
 limit comparator: on-off-on
 limit comp. with start-up suppression: off-on-off

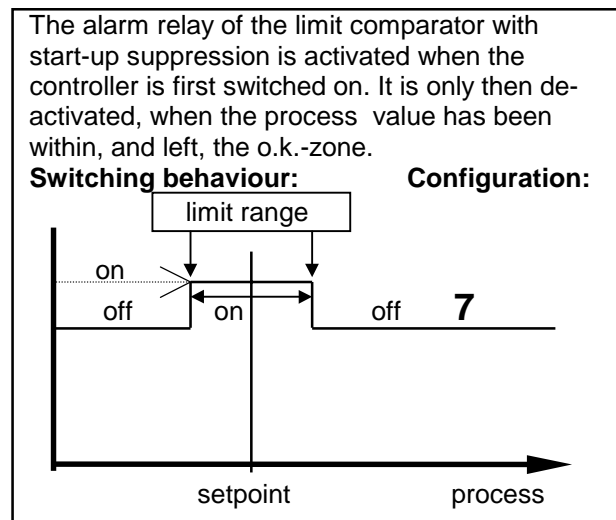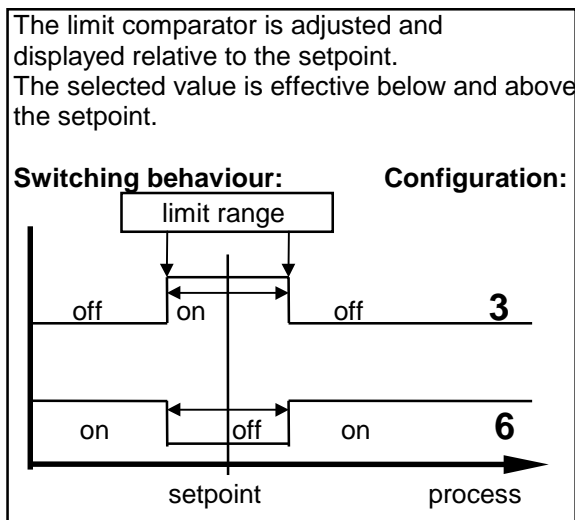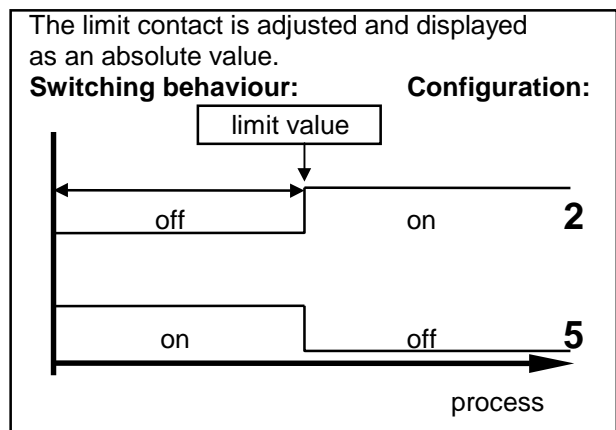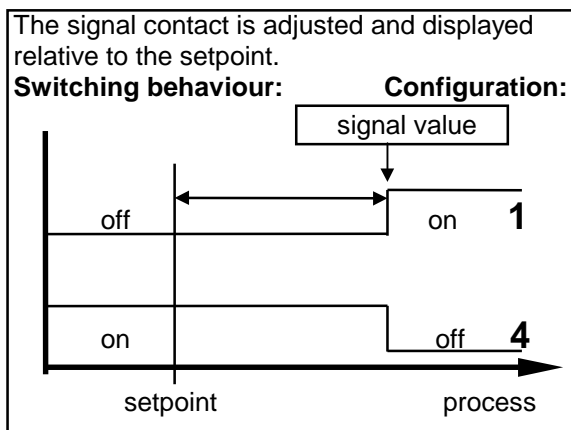

on: Relay "activated" or bistable voltage output "high".
 off: Relay "not active" or bistable voltage output "low".


If a setpoint ramp has been programmed, the alarms that are relative to the setpoint (signal contact, limit comparator) follow the setpoint up the ramp.

Please note:

In case of sensor error the alarms will react in the same way as range override.
 The alarm contacts therefore do not offer protection against all types of plant breakdown.
 With this in mind, we recommend the use of a second, independent monitoring unit.

Parameter Level

Display "Process"	Parameter	Display „Set“	
P	xp, prop.-band (P)	OFF; 1...200 %	(ex works: 10)
tS	Motor actuating time (d)	5 ... 800 secs	(ex works: 40)
tn	reset time (I)	0,5 ... 80,0 min.	(ex works: 3,0)
Sd	control sensivity	OFF; 0,1...80,0 units	(ex works: 0,1)
Sh	dead band	OFF; 0,1...80,0 units	(ex works: 0,1)

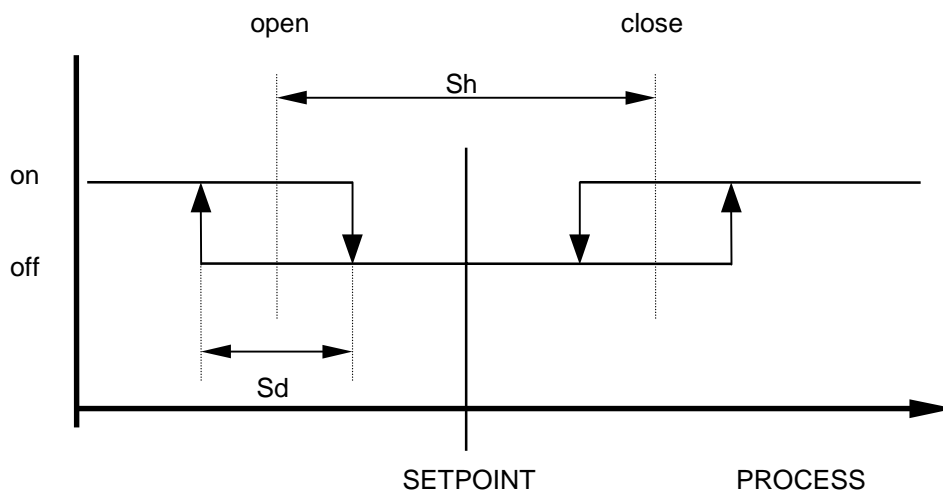

3-point-stepping controllers use PI control action in combination with motor actuators. It is important, that Sh should be several times larger than Sd . Switching frequency is dependant on the pre-selected feedback values.

Operating Level

Display "Process"	Parameter	Display "Set"
----------------------	-----------	---------------

Process
(process)

and

Setpoint 1 (set)	OFF, SP.Lo...SP.Hi	(ex works: 0)
----------------------------	--------------------	---------------

are displayed simultaneously (basic setting).

If setpoint 1 (SP1) is set to "OFF", the controller switches to stand-by. The setpoint display then shows "OFF". All main outputs are switched off and the alarm is de-activated. All parameters can be displayed and altered during stand-by.

SP2 Setpoint 2	OFF; SP.Lo SP.Hi	(ex works: OFF)
-----------------------	------------------	-----------------

The 2. setpoint is active when the external contact K1 is closed. The corresponding LED „SP2“ lights up on the faceplate, and the second set-point is shown in the display.“
Please note, that the value of the second setpoint cannot be changed in the operating level. In order to change the value the parameter SP2 has to be selected.

AL 3 Alarm 3, Out3	signal contact, setpoint dependent	
	OFF; -999...1000 °K	(ex works)
	OFF; -99,9...100,0 °K	
	limit comparator, setpoint dependent	
	OFF; 1...1000 °K	(ex works)
	OFF; 0,1...100,0 °K	
	limit contact, process value dependent	
	OFF; range bottom ... range top	

The range of adjustment is dependant on the sensor and the alarm configuration. Both have to be set in the configuration level.

Hand manual mode	OFF: The instrument is operating like a controller	(ex works)
	On : The instrument operates only as an actuator	

„On“:

Display „process“ : the actual process value is displayed.

Display „set“ : the word **HA** will be displayed, instead of the setpoint.

Press key „ up „: OUT1 (open) is activated

Press key „down“: OUT2 (close) is activated

In the mode HA = on the setpoint can not be adjusted.

Error displays

<u>Display</u>	<u>Cause</u>	<u>Possible remedy</u>
SP.Lo	Lower setpoint limit has been reached	Reduce limit, if need be
SP.Hi	Upper setpoint limit has been reached	Increase limit, if need be
LOC	Parameter has been locked	Unlock, if need be
Er.Hi	Top range end has been exceeded, sensor defect	Check sensor and cable
Er.Lo	Bottom range end has been exceeded, sensor defect	Check sensor and cable
Er.OP	Self tuning error	Extinguish error signal by pressing the „E“-key. Check the self tuning conditions and restart.
Er.SY	System error	Extinguish error signal by pressing the „E“-key. Check all parameters. If the error signal continues please send the controller back for examination.

Installation Instructions

Make certain that the devices described here are used only for the intended purpose.

They are intended for installation in control panels.

The controller must be installed so that it is protected against impermissible humidity and severe contamination.

In addition, make sure that the permitted ambient temperature is not exceeded.

The electrical connections must be made according to the relevant locally applicable regulations.

If using a thermocouple sensor, the compensation cables must be laid directly to the controller terminals.

Transducers must be connected only in compliance with the programmed range.

Transducer cables and signal lines (e.g. logic or linear voltage outputs) must be laid physically separated from control lines and mains voltage supply cables (power cables).

To keep the CE-conformity it is necessary, to use for sensor- and low voltage signal lines shielded cables.

Spatial separation between controller and inductive loads is recommended.

Interference from contactor coils must be suppressed by connecting adapted RC-combinations parallel to the coils. Control circuits (e.g. for contactors) should not be connected to the mains power supply terminals of the controller.

IMPORTANT:

Before operation, the unit must be configured for its intended purpose (e.g. sensor type and range, alarm adjustment etc.). Please see „Configuration Level“.

Disclaimer of liability

We have checked the contents of the document for conformity with the hardware and software described.


Nevertheless, we are unable to preclude the possibility of deviations so that we are unable to assume

warranty for full compliance. The information given in the publication is, however, reviewed regularly.

Necessary amendments are incorporated in the following editions.

We would be pleased to receive any improvement proposals which you may have.

The information contained herein is subject to change without notice.

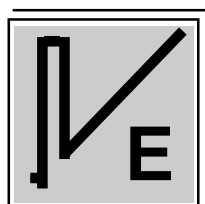

ELOTECH Industrieelektronik GmbH

Verbindungsstr. 27

D – 40723 Hilden

Tel. 02103 / 23055 Fax. 02103 / 23057

Internet <http://www.elotech.de>

Parameter Adjustments

1. Configuration level:	Ex works:	Customers adjustments:
ConF Controller Configuration	3PSt	
Out4 Configuration Out4	Pr.0	0...20mA
SEn Sensor Configuration	P4 °C	(0.400°C, RTD)
SP.Hi Upper Setpoint Limitation	400	
SP.Lo Lower Setpoint Limitation	0	
Co.A3 Alarm 3-Configuration	OFF	
Co.Sb Behaviour in event of sensor break	OFF	
Co.c1 Function of external contact k1	Loc	
LOC Adjustment lock	OFF	
1140 Control number: EL.xx	read only	
2. Parameter level:	Ex works:	Customers adjustments:
P Proportional band (P)	10,0	
tS Motor actuating time ,Rate (D)	40	
tn Reset time (I)	3,0	
Sd OUT 1/4- Control sensivity	0,1	
Sh Switch-point difference	0,1	
OPt Self tuning	OFF	
OFSt Process value offset	OFF	
3. Operating level:	Ex works:	Customers adjustments:
Actual process value (process)	read only	
Setpoint (set)	0	
SP2 Setpoint 2	OFF	
AL3 Alarm point 3	OFF	
AL2 Alarm point 2	OFF	